



Juno Tips and Tricks: Menus



Justine Taylor
Low Vision Product Manager
APH





Mike Wood

Strategic Accounts Manager-
Education

enhanced
vision

Freedom
Scientific

Optelec

TPGi

VISPERO® BRANDS

Learning Objectives

- The participant will:
 - Explore button location and functions.
 - Become oriented to features by navigating through menu screens.
 - Learn key settings in the button bar menus, main menu, reading settings, menu settings, user settings, and review system settings.



Challenges

- The Juno requires customization to best benefit a user.
- The Menu can be harder to navigate without having the menus spoken aloud.



Orientation to Juno



1 Camera: Rotate for multiple purposes

2 Power: Short press to power on or put on standby, and long press to power down

3 & 4 Color mode: Move up or down through color modes

5 Capture: Press to capture or return to Live view

6 & 7 Magnification: Increase or decrease zoom level

8 LCD screen: Touch to select

Main Menu

- File manager
- About this device
- Change screen brightness
- Settings



Settings

- Reading Settings
- Menu Settings
- User Settings
- System Settings



Reading Settings

- Viewing modes set the default view
 - Teleprompter mode
 - Tickertape mode
 - Image mode
- Highlight
 - Underline
 - Box
- Reading language choose language
- Reading voice select voice



Menu Settings

- Spoken Menus
- Device voice
- Color themes
- Font size



User Settings

- Color modes
- Standby time
- Storage manager



System Settings



Tap the **System Settings** icon to display the **System Settings** screen, which has four options:

Time and Date



Default Save Types



Update Juno



Reset to Defaults



How to use System Settings

Time and Date

- Set the date and time that the system displays in the upper right corner. If the battery fully discharges, then you will need to reset the date and time.

Default Save Types

- Select the default file type used when capturing pictures and the default file type used when capturing text.

Update Juno

- Update Juno with the latest software and firmware. For any future updates download the latest Juno software onto a USB-C flash drive to update Juno. You can use the same flash drive to update multiple Juno devices.

Reset to Defaults

- Reset the device to the default values. All customized settings are lost, including the volume, speech rate, brightness level, and voice selection. However, the menu voice, date, and time are saved.




Discoveries

- Orientation to device buttons and on screen menus.
- Navigating through Juno is easier when the menus are read aloud.
- Exploring setting options and device setup for:
 - Reading Settings
 - Menu Settings
 - User Settings
 - System Settings



Juno

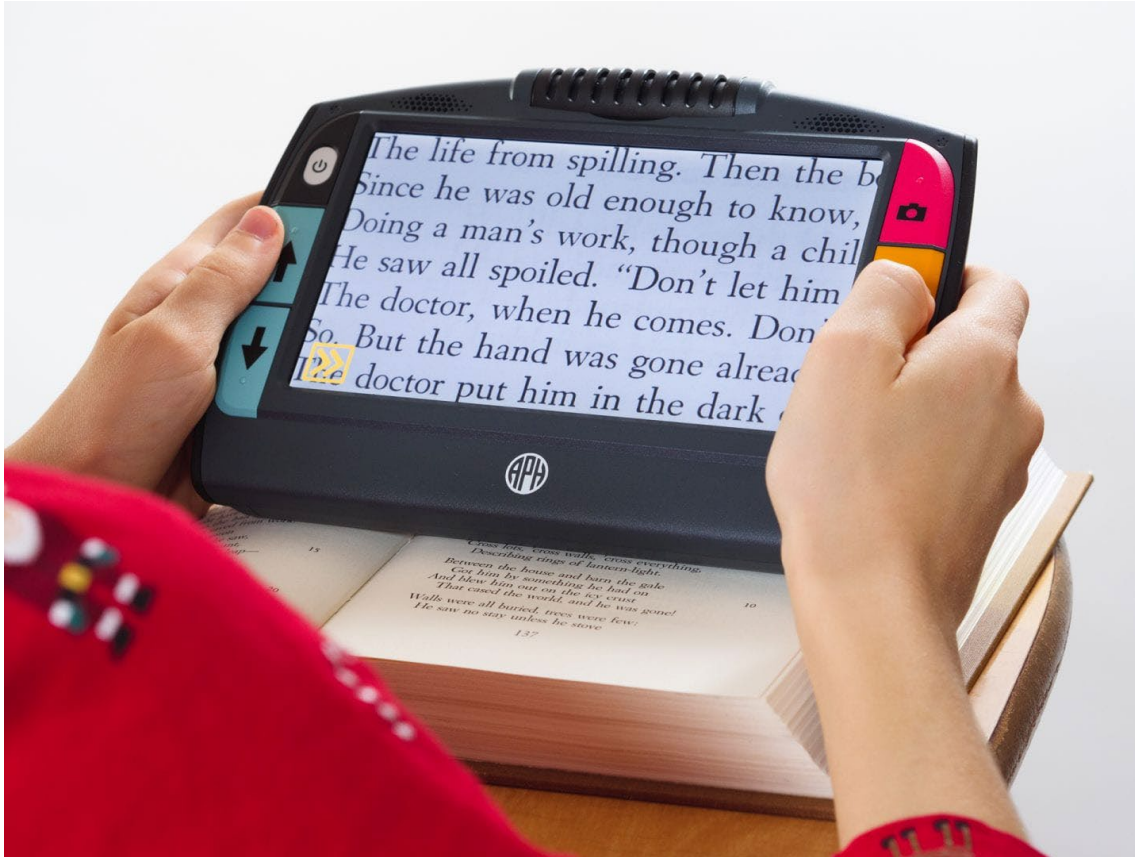

- Quota Price: \$1,177.00
- Non-Quota Price: \$1,392.00